





ASSEMBLY INSTRUCTIONS

GRAND 3-DOOR WARDROBE










SKU 5692 - Mahogany

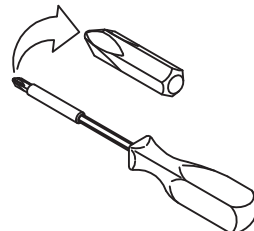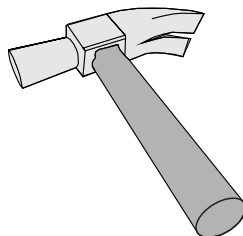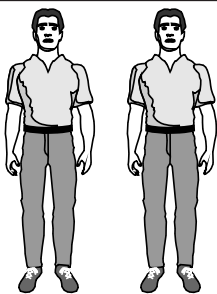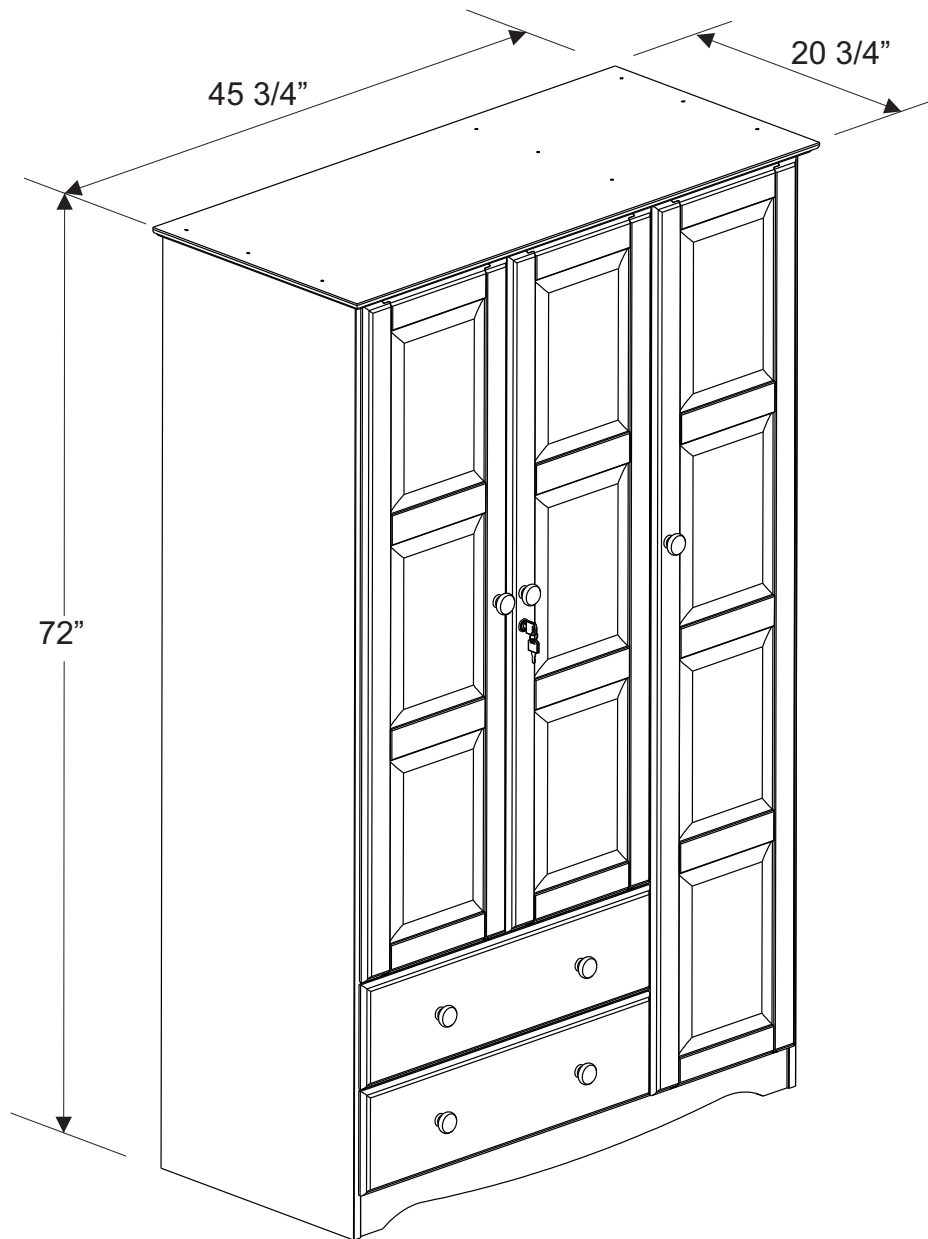









SKU 5694 - Honey Pine


SKU 5696 - Java




SCREWS ARE SHOWN IN ACTUAL SIZE




A1	 4,0x30	55
A4	 3,5x14	18
A9	 3,5x16	53
A16	 4,0x40	09
C2	 8,0x25	51
D3		02
D4		12
D10		02
D16		01



D27		05
E3	 400mm - 15 3/4"	02
E4	 400mm - 15 3/4"	02
F1	 31mm	01
F2		01
F3		02
F4		09
F5		09
G1	 10x10	70
H1		07

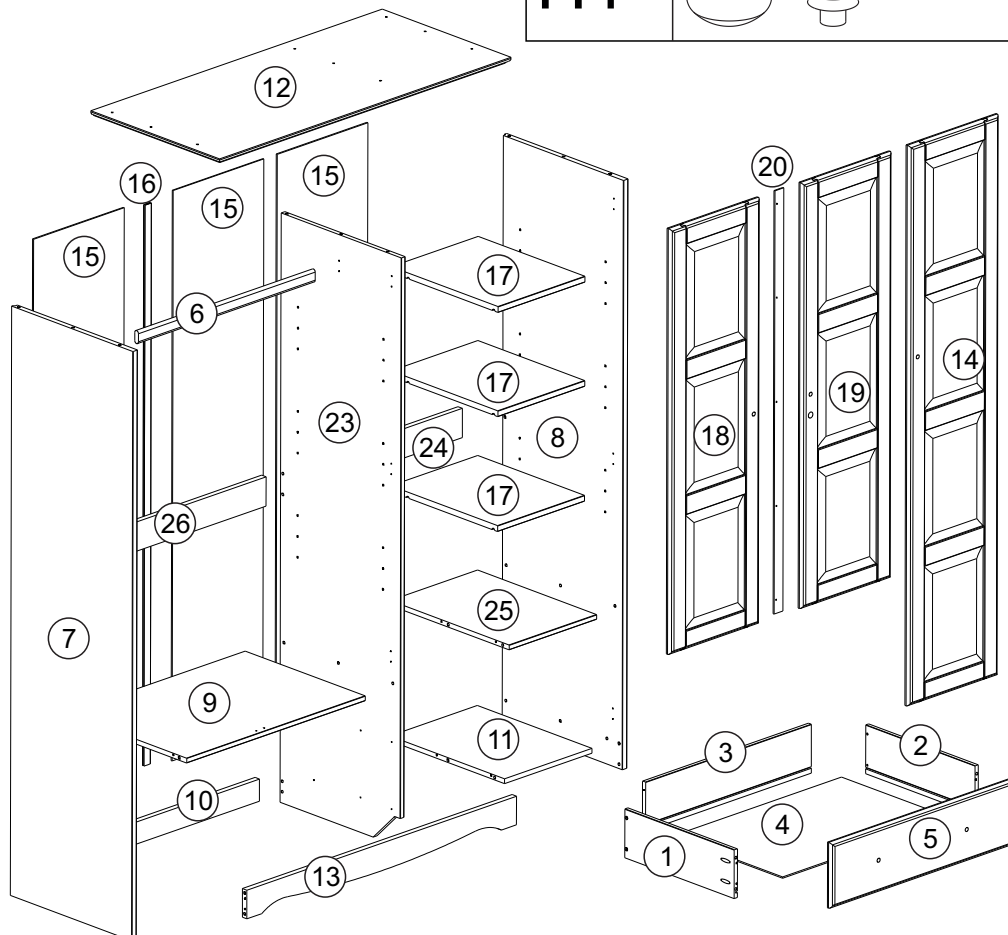

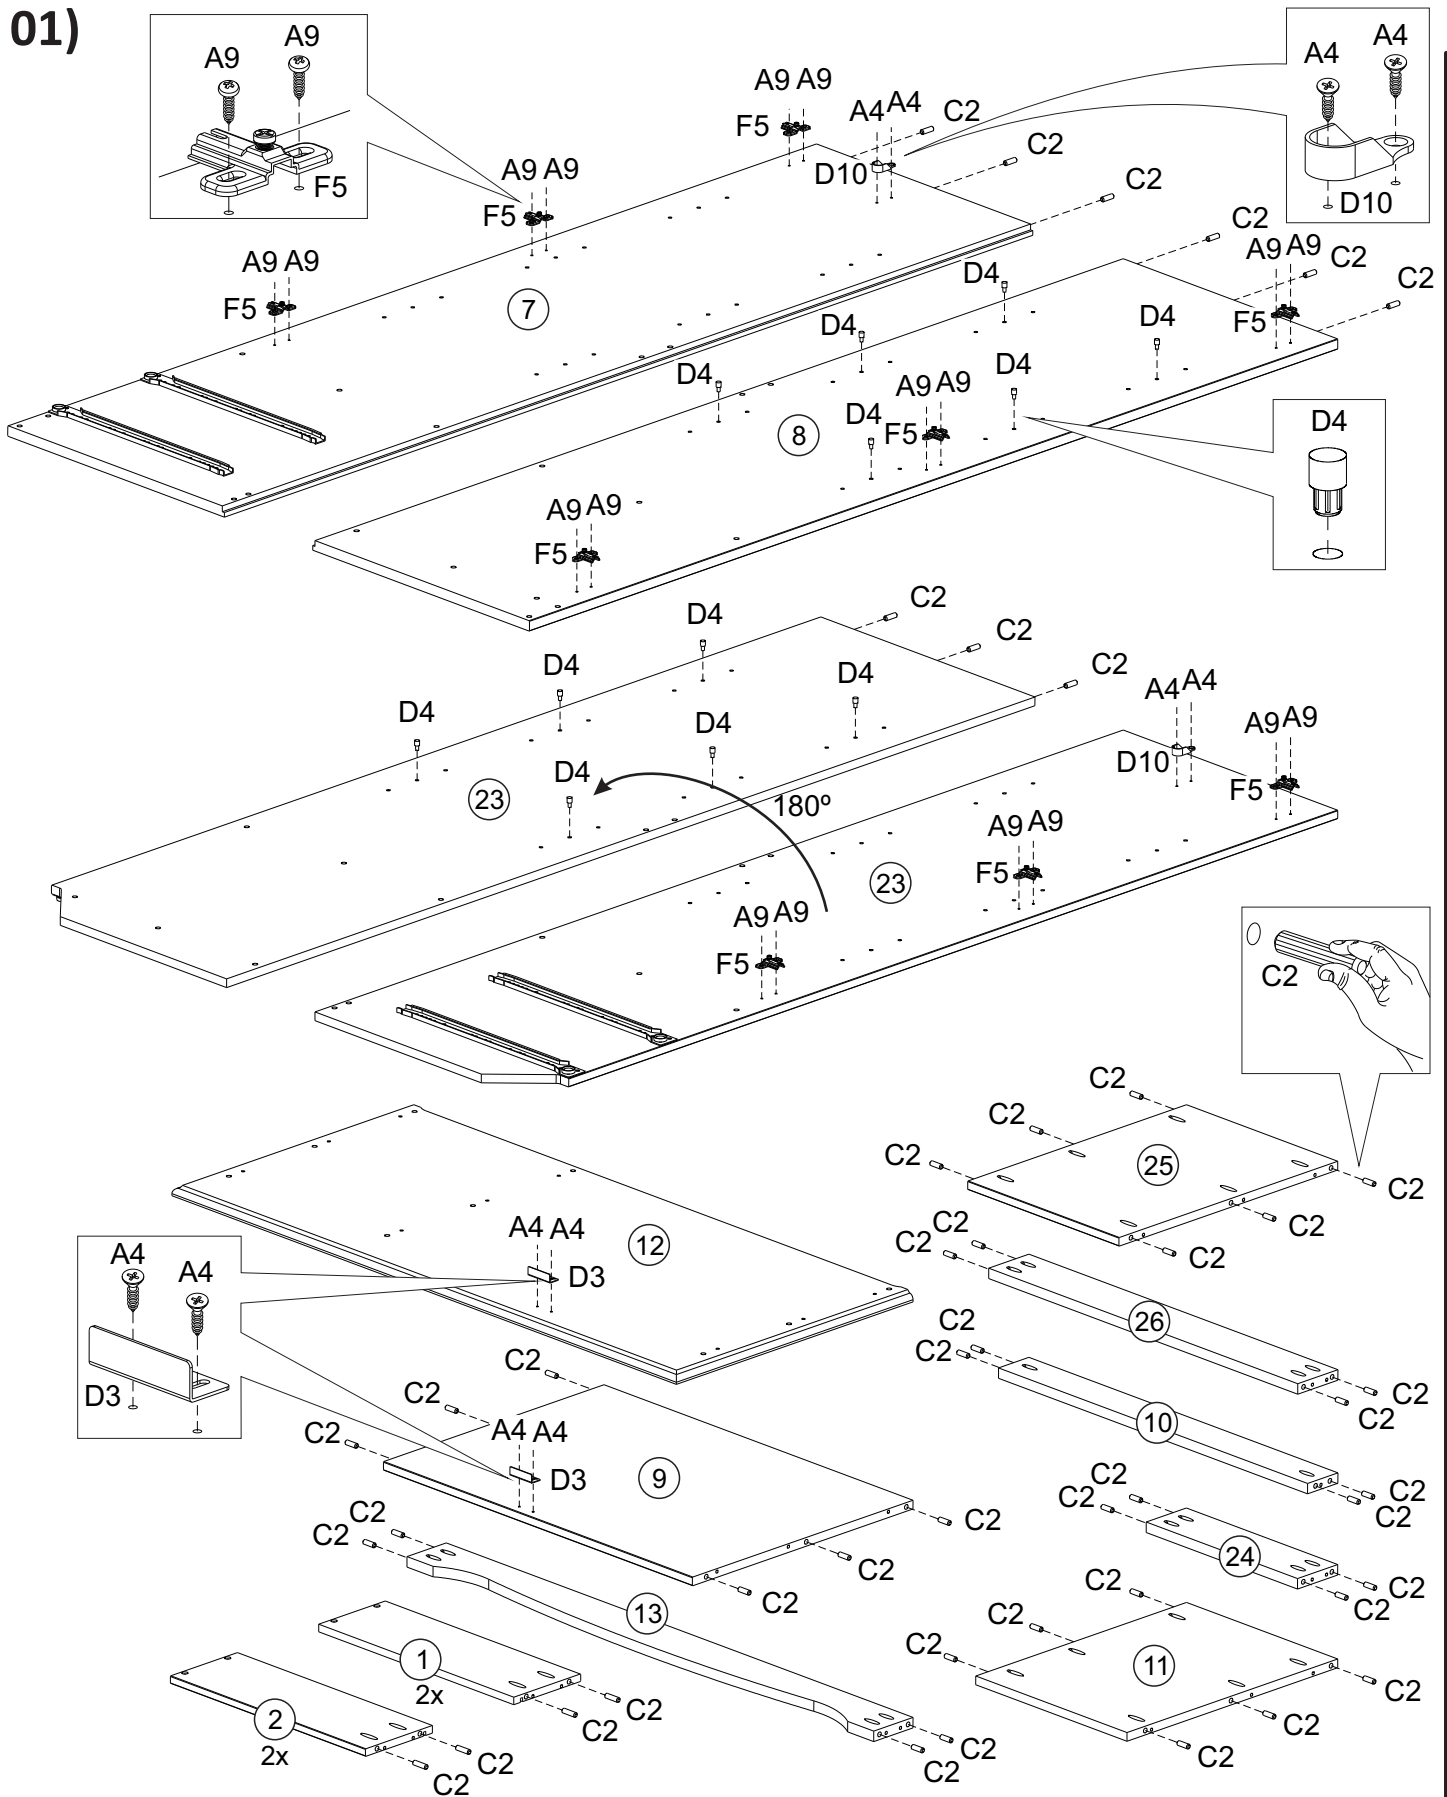

01)






A4		08
	3,5x14	
A9		18
	3,5x16	
C2		51
	8,0x25	




D3		02
D4		12

D10		02
F5		09


02)

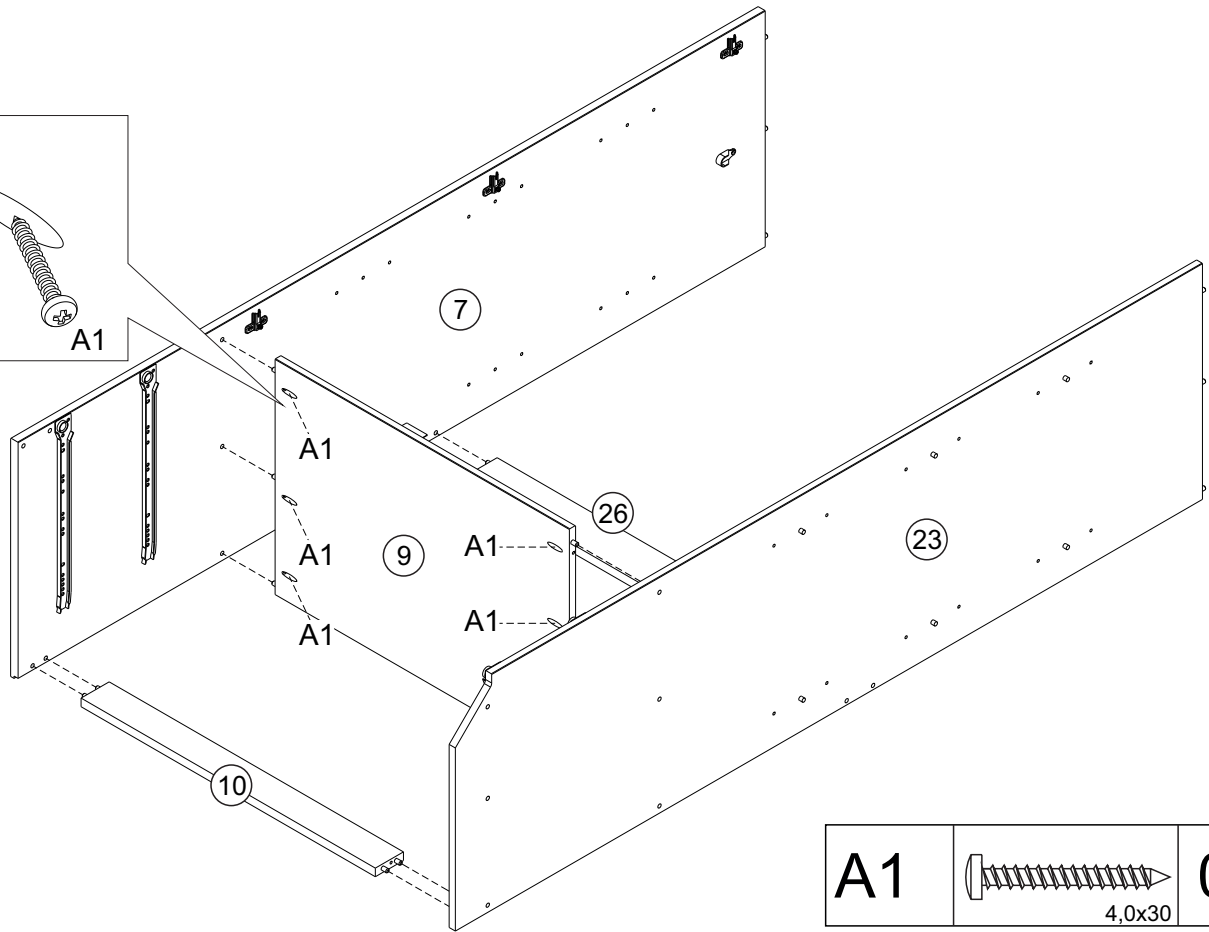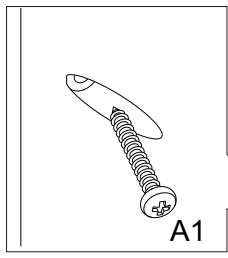




03)

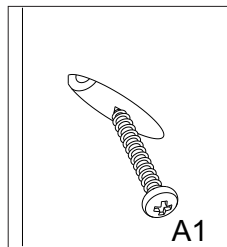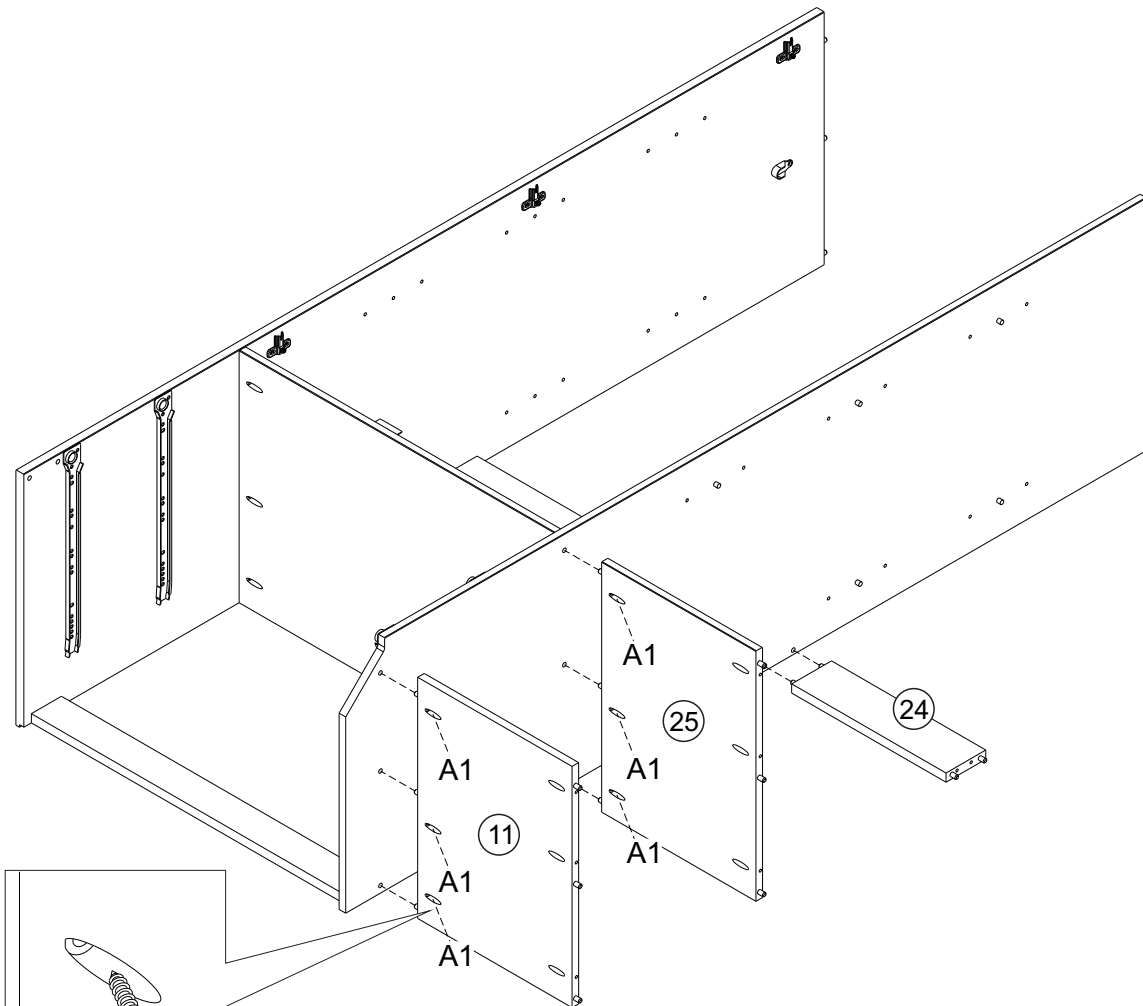



04)

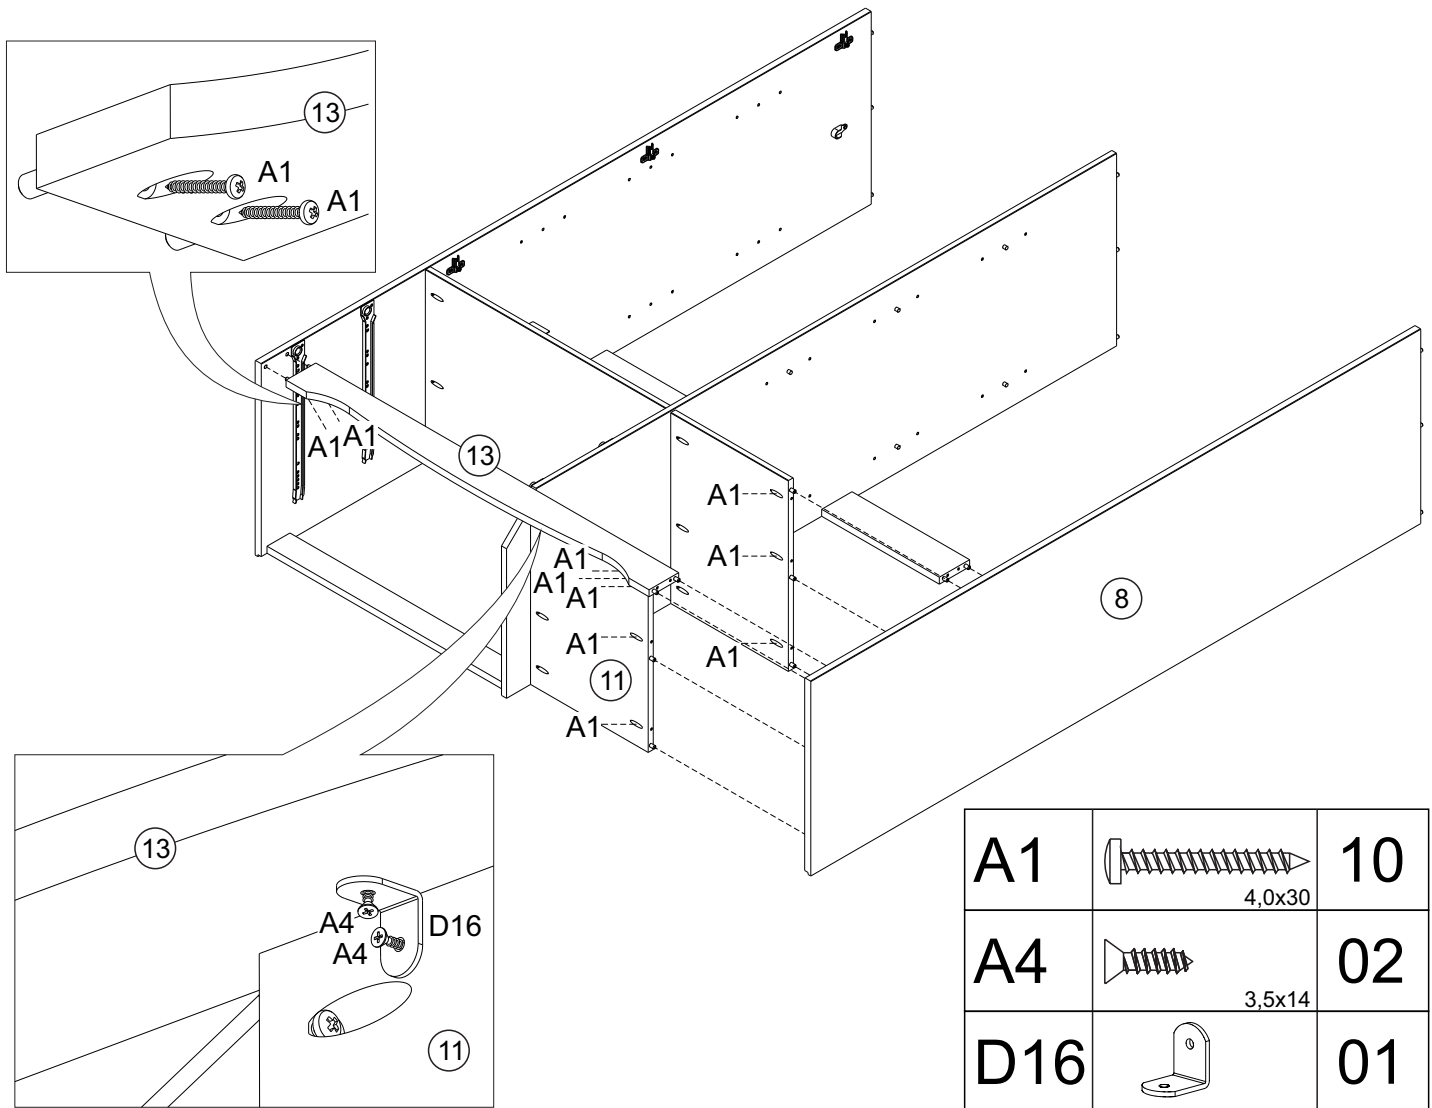



A1	 4,0x30	10
A4	 3,5x14	02
D16		01


05)

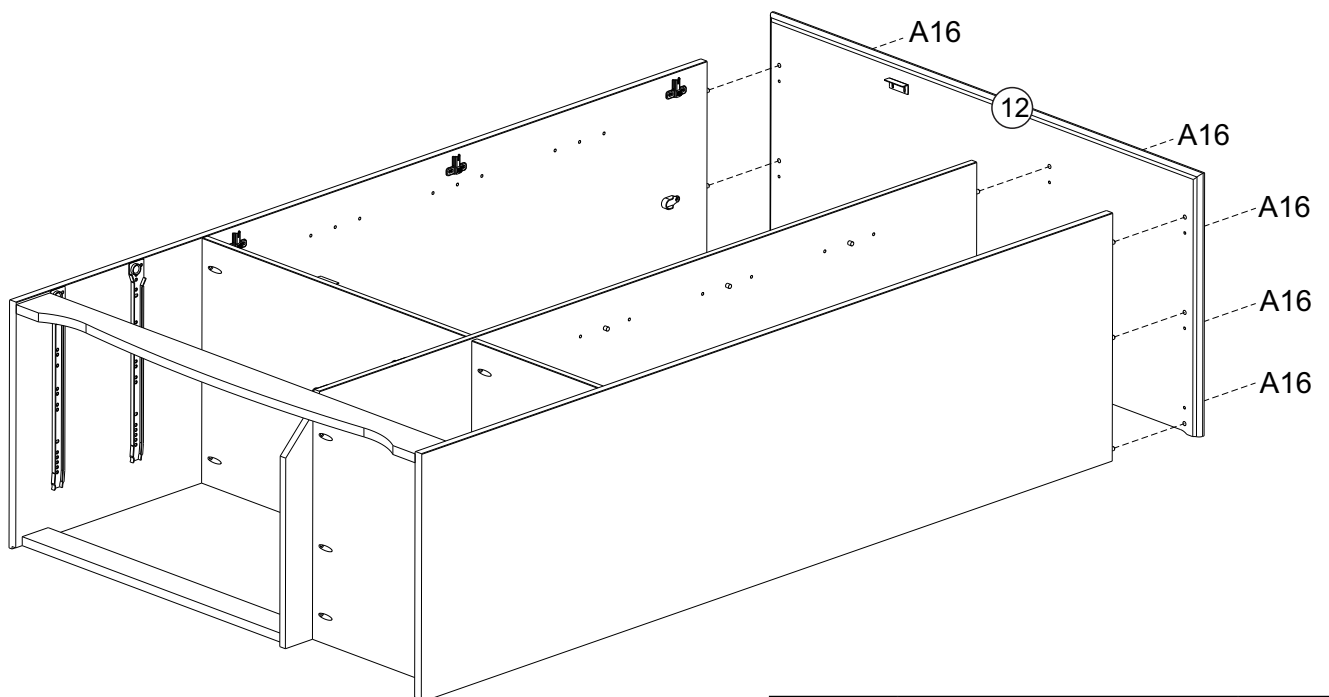




A16	 4,0x40	09
-----	---	----

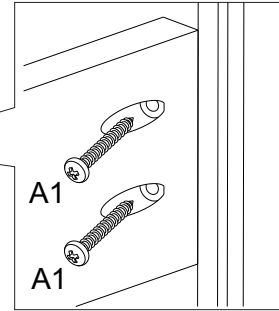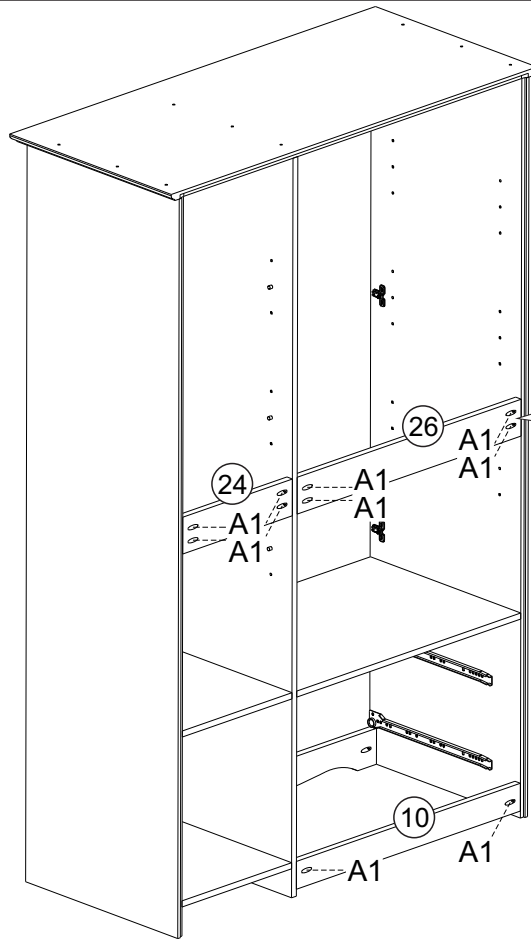


06)




A1	 4,0x30	10
----	---	----

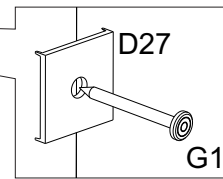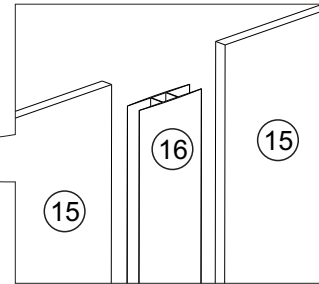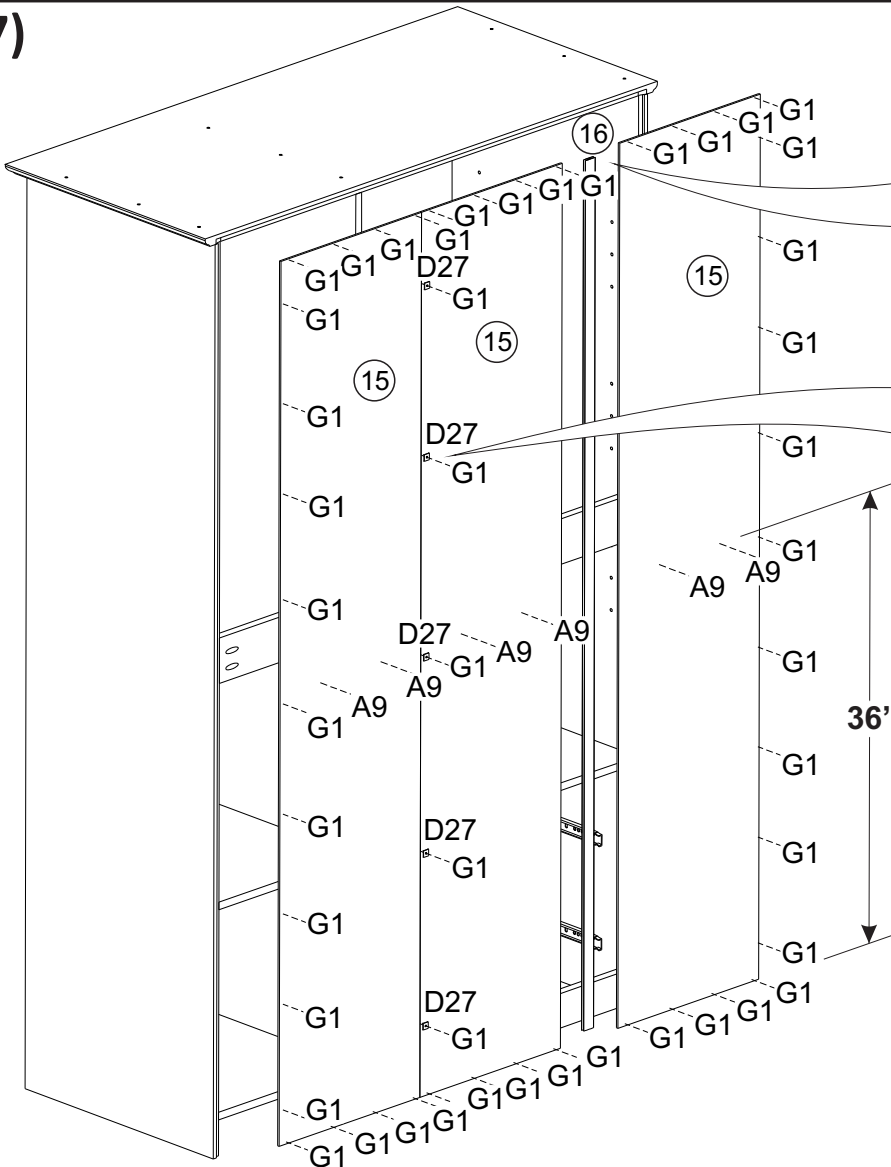07)







A9	 3,5x16	06
D27		05
G1	 10x10mm	70


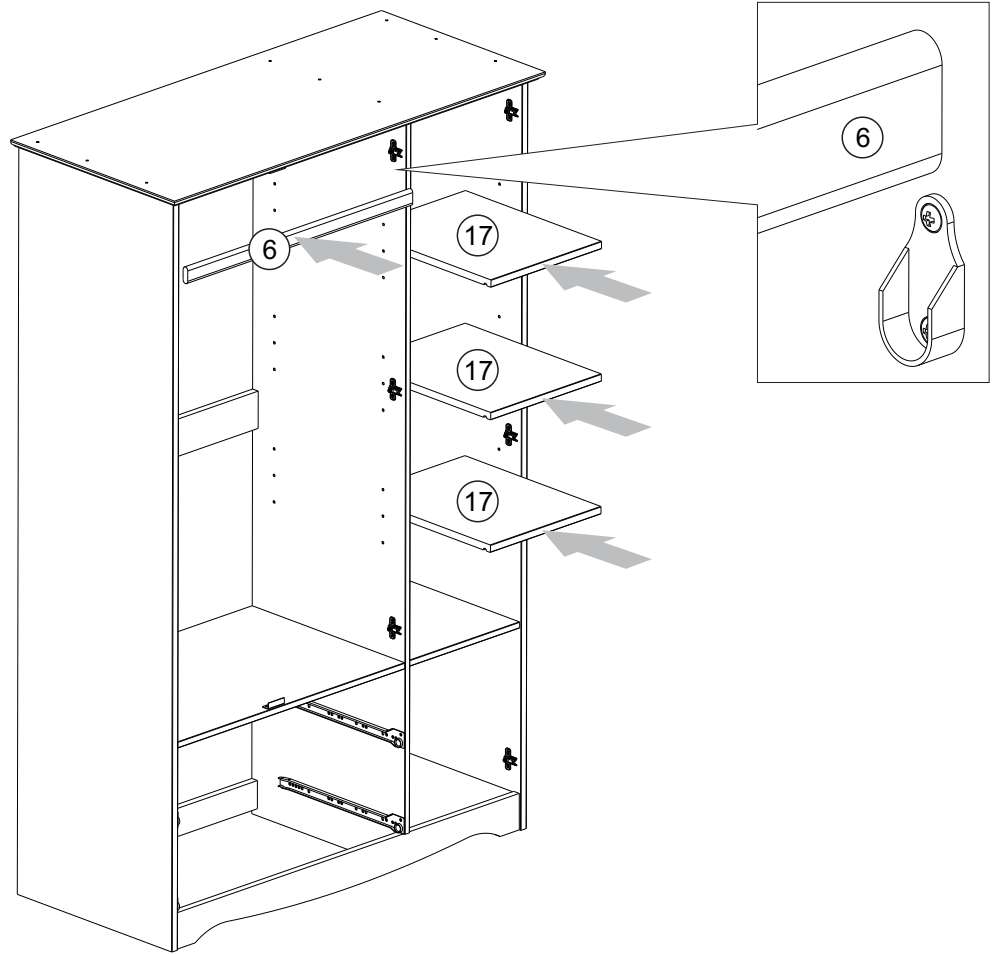
08)

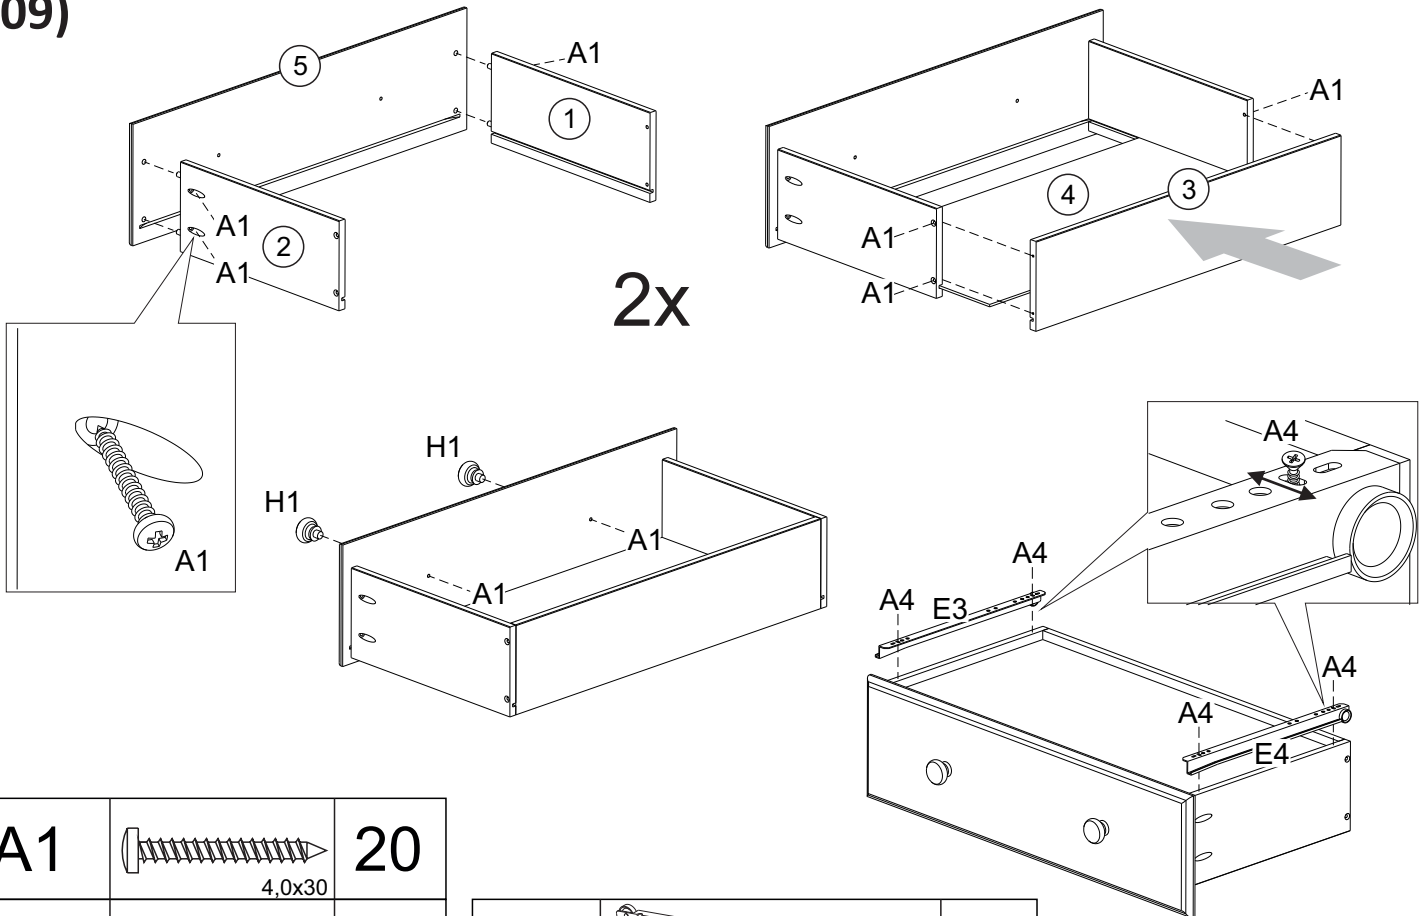


09)




A1	 4,0x30	20
A4	 3,5x14	08
H1		04

E3	 400mm - 15 3/4"	02
E4	 400mm - 15 3/4"	02




10)

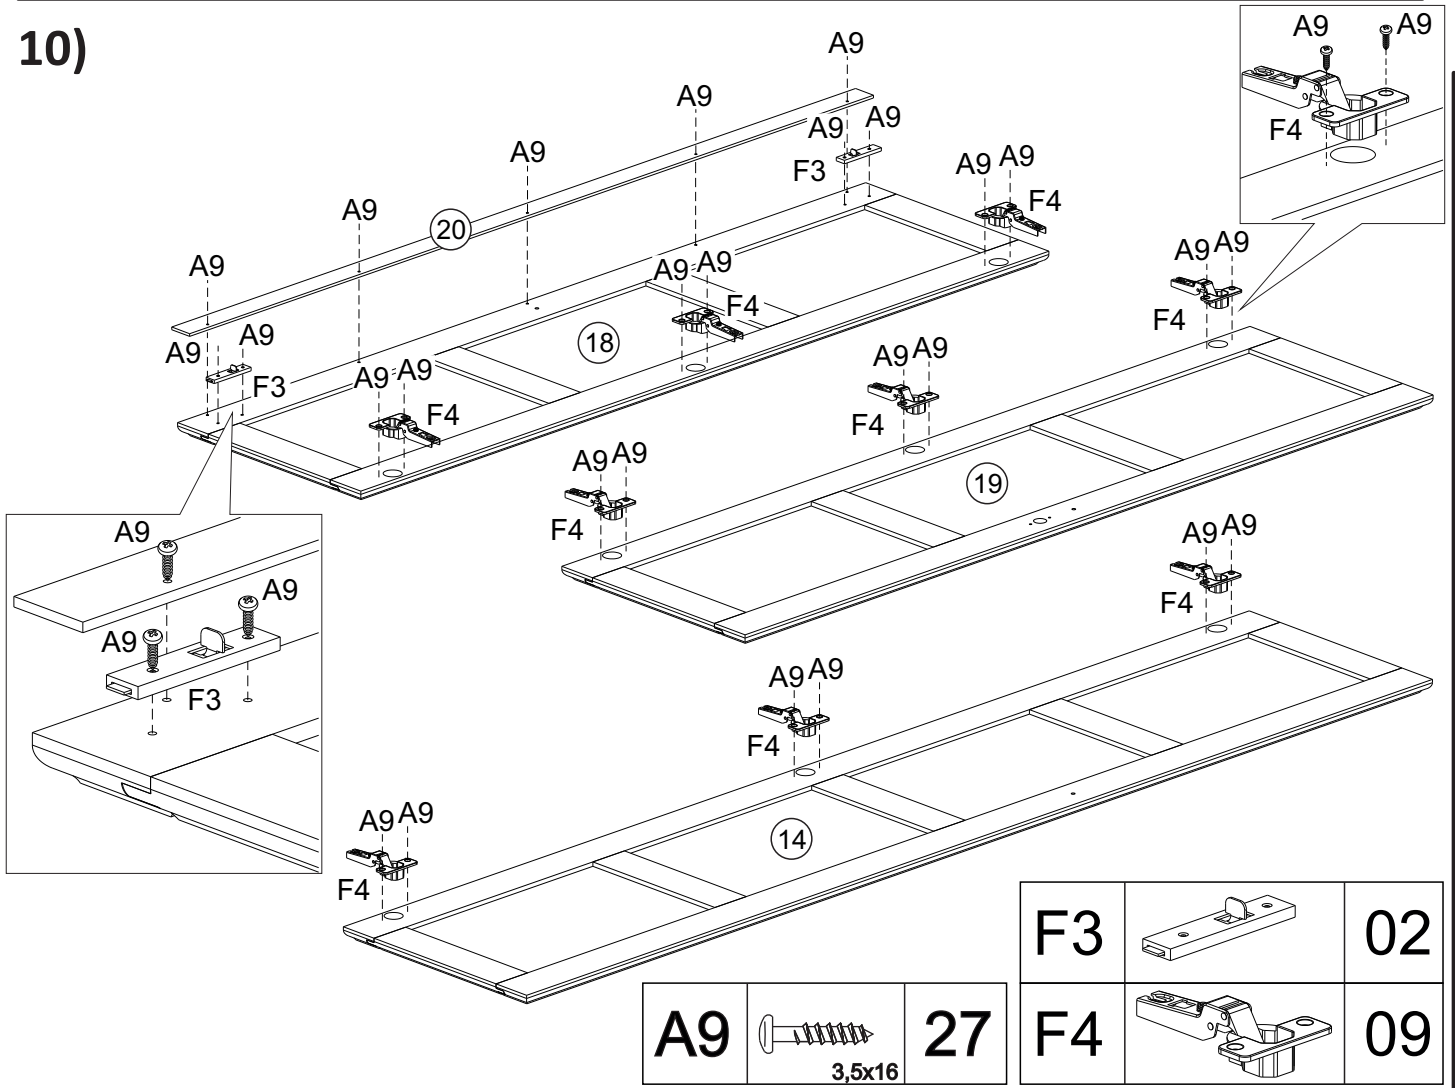

11)

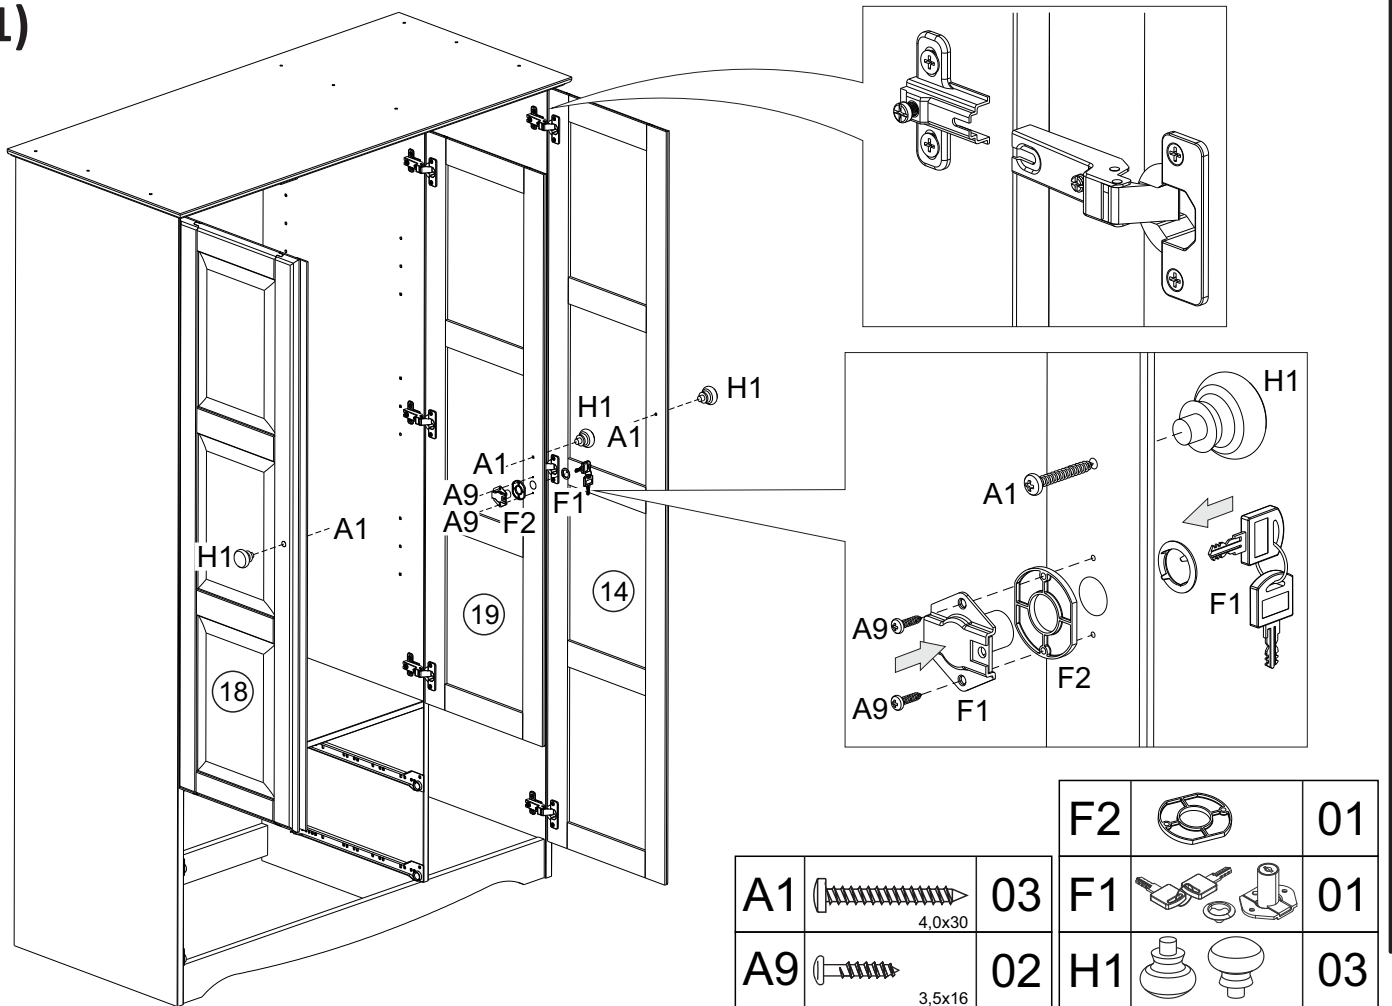

12)

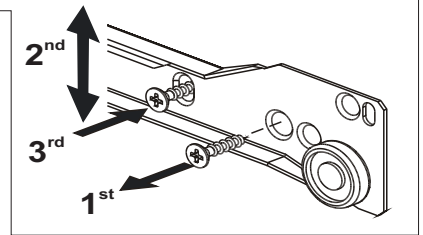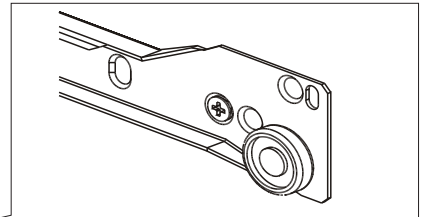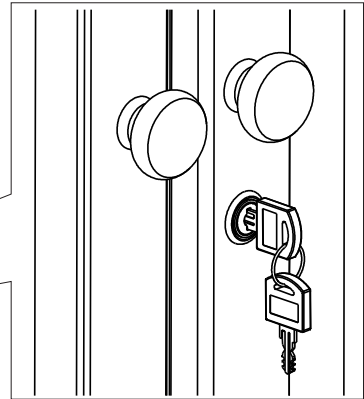

Metal glides can be adjusted
as shown above - Steps 1 through 3